


MPT-II Font and Firmware download


Instructions

1, Font Download

- 1) Use the printer serial cable provided by the manufacturer to connect with the PC which has serial port.(Be sure to use the PC has directly COM port, not USB convert to Serial, since our “MPT Tools” doesn’t support it.)
- 2) Run “MPT Tools”, in “Printer setting”, pls find “Font download” at the bottom, be sure “COM Port” is corresponding with the COM port your PC used. And baud rate is same with the printer’s, the printer’s baud rate, you can check it by printing a self-test receipt. How to do the self-test: Press “ FEED” button firstly, press “POWER” button, then release “Power” button firstly, and release “FEED” button.

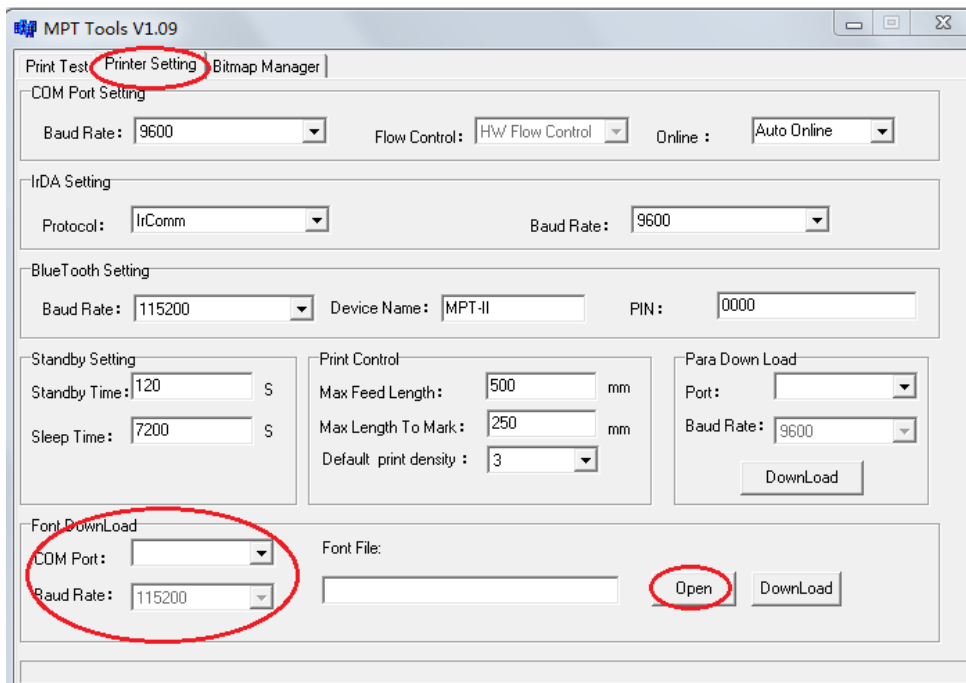

- 3) At the right bottom side, pls dial “Open” to find the location of the font file “GBK24+GB2312.bin”
- 4) Press “Power” button of the printer until it gives 4 sounds continuously, it means the printer enters into font downloading mode. Then dial “Download” at the bottom of “MPT Tools”. Then the font downloading will begin. Be sure the printer is in font downloading mode.

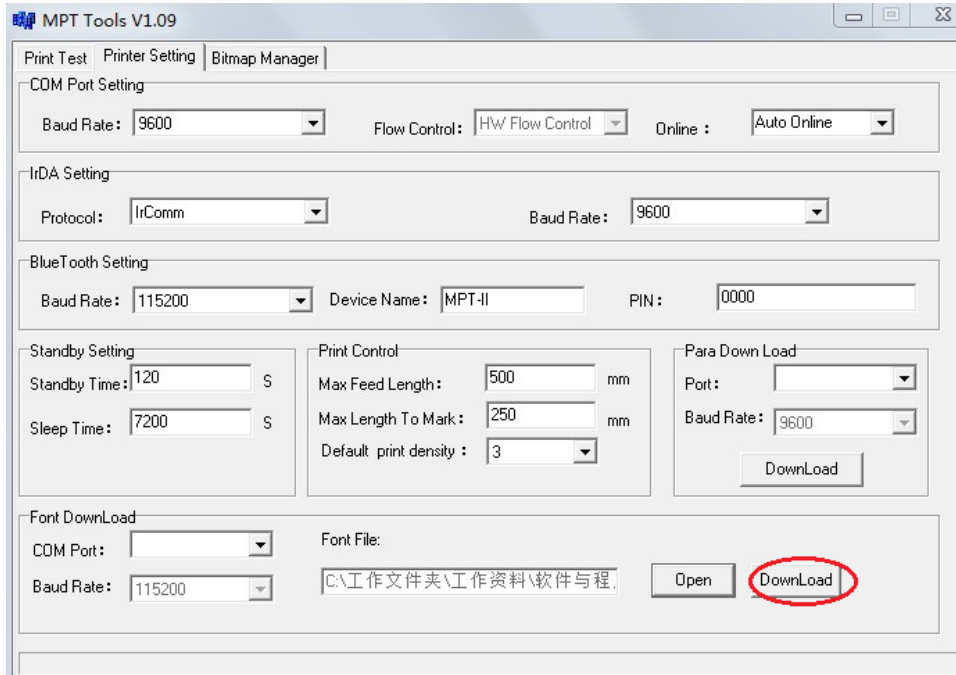

- 5) After font download finished, it will show at the bottom of “MPT Tools” font downloading finish and the printer will give 5 sounds.

2, Firmware Download

- 1) Use a standard USB cable to connect the printer with PC which has USB port.
- 2) Press “POWER” button of the printer, meanwhile, install the battery of the printer, then on your PC, will display “find new device”.
- 3) In the new disk, you will find the old version of the firmware, pls delete it, and copy the new one “MP2_BT_V1.12.02.bin” to this place .
- 4) Reinstall the battery of the printer, and do a self-test. If showed on the self-test receipt, the firmware version is MP2_BT_V1.12.02, and no wrong or strange characters, then both font and firmware downloading succeed.